

ASSEMBLY

INSTRUCTIONS

MOJURAA

EMAIL

vip@mojuraa.com

PHONE

+1(660)553-8096

NEED HELP ?

Feel free to contact us via email or text if you have any specific questions!

KM6001

Top Grain Leather
Zero Gravity Power Recliner Chair




COMPONENTS INCLUDE



Chair base
x1



Swivel
x1

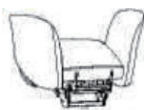

Seat
x1



Back Cushion
x1



Power Supply
x1




Battery
x1

HOW TO PUT TOGETHER


STEP ONE

Remove the seat from the carton, lay it flat on the ground, and cut off the 4 ties at the bottom.

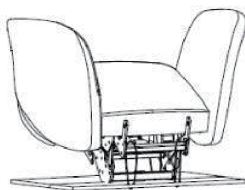

STEP TWO

Insert the Swivel vertically into the centre hole of the chair base.

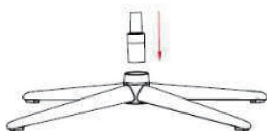


STEP THREE

Align the centre hole of seat bottom frame with the top of the Swivel and insert it vertically to make them tightly combined.




STEP FOUR

Align the locks of back cushion with the latch of the seat and press the latch firmly. When you hear a "click", the installation is successful.

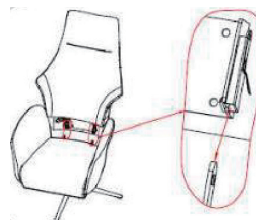

STEP FIVE

Connect the control box with the outgoing wire of back cushion.

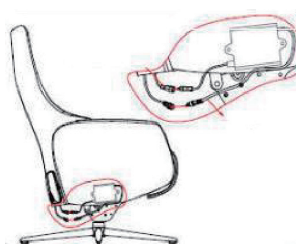

STEP SIX

Insert the battery pack in the direction of the card slot. Rotate 90° clockwise to complete the installation.

